

Installation Best Practices



Attention:
Horizontal Right/Downflow **MUST**
move the return air sensor upstream.

Indoor Unit Horizontal Right & Downflow – Air Handler 45MBAA / 45MUAA

Install Manual Application Clarification

- In these two applications the Return Air Sensor MUST be moved.
- No need to move for horizontal left or upflow.

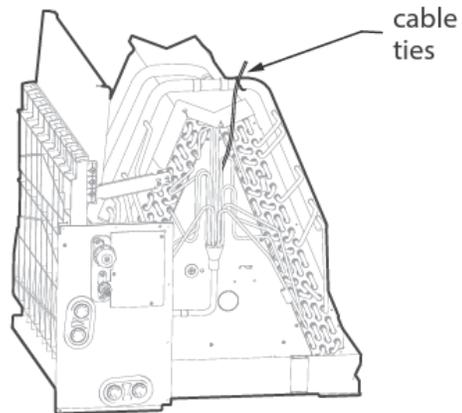


Fig. 26 — Use cable ties to fix the room temperature sensor

Instructions from Install Manual.

