





Controls

45MBAA Control Overview

- As of 7.10.2025, the Install Manual and HVACPartners and does not have any DIP switch information.
- The Product Manual on HVACPartners, has information, but appears to have the controls mixed up.
- This training has swapped all information to match the label on the unit.


Table 12 – Function Combination Table of SW1-1 and SW1-4

SW1	Control Type	IDU and ODU Connection	Note
	Wired Controller / 24V Thermostat	S1 + S2	Auto Discovery
	Wired Controller	S1 + S2	Scenario 2
	24V Thermostat	S1 + S2	Scenario 1
	24V Thermostat	24V Thermostat	This setting not applicable.

Page 12 from the Product Manual, all DIP setting was accidentally left out of the Install Manual.

Label on unit

These do not match

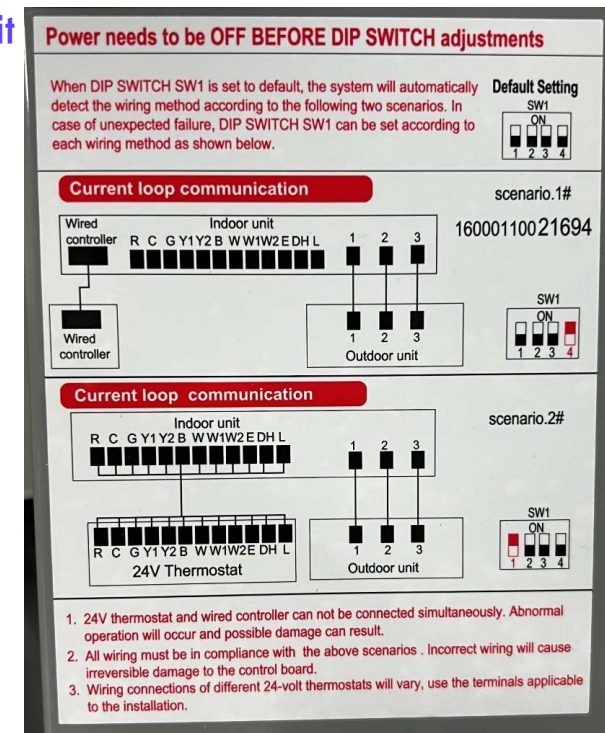

Controls

45MBAA Control Overview

- As previously mentioned, the 45MBAA can use a 1401 Wired Controller or standard 24-Volt thermostat (both purchased separately).
- The built-in 24-Volt interface can provide further flexibility, functionality and control by a 3rd party 24-Volt thermostat.
- The optional 24-Volt control can be wired to the fan coil using 18 gauge solid or stranded wire.
- Do not connect the 1401 Wired Controller & a 24-Volt Thermostat at the same time.



KSACN1401AAA

or




24-Volt

or

Stat of
choice

choice depends on features needed

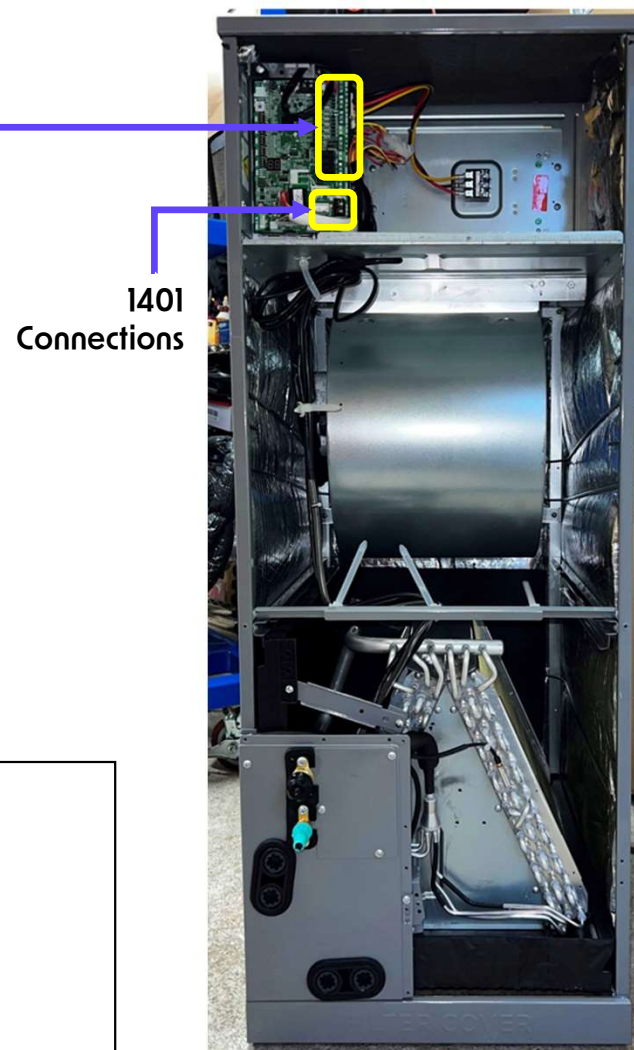

Controls

45MBAA Thermostat Choices (if not using the optional 1401 Wired Control):

- Most 24-Volt thermostats will work for a 45MBAA with an Electric Heat package, refer to the Application/Installation instructions for specific details for the model installing.
- We strongly recommend that these systems are always wired to operate as a Heat Pump, Conventional will work, but will not allow H/P lockout.

Heat Pump Wiring –
Conventional Wiring –

Heat Pump Lock Out Available
No Heat Pump Lock Out Available

- The 45MBAA with an Electric Heat package does not require the thermostat to sense outside temperature to operate.



KSACN1401AAA



ecobee



Cielo



Honeywell



Nest



VIVE



Controls

45MBAA Quick Setup Guide

Application: Heat Pump with or without Electric heat

SW1-4 – Turn ON for 140I Wired Control, Scenario 1

SW1-1 – Turn ON for 24-Volt Control, Scenario 2

SW4-1~3 – If electric heat kit is installed set using charts provided, if no kit leave all OFF.


S4-4 – Leave ON if no electric heat kit.

S4-4 – Leave ON if using 24-Volt control with 5, 8 or 10kW electric heat kits


S4-4 – Turn OFF only if using 24-Volt control with 15, 20 or 25kW electric heat kits

For this application, all others can remain in their default position.

45MBAA – ALL Defaulted
to OFF

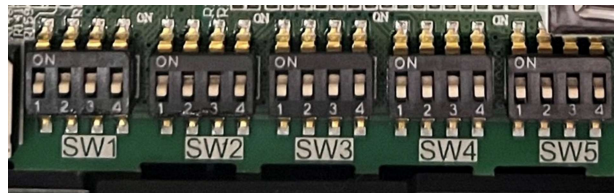

S4 All defaulted to ON

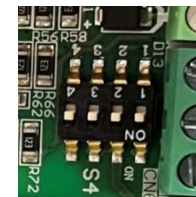

Scenario 1
140I Wired
Control



Scenario 2
24-Volt
Control



45MBAA Communication Board




Controls

45MBAA Control Scenario 1

Control Selection – SW1 DIP Switches

Wired Control 1401

Control Wire IDU to Control: 16 gauge Stranded 2-wire
Set SW1-4 to ON

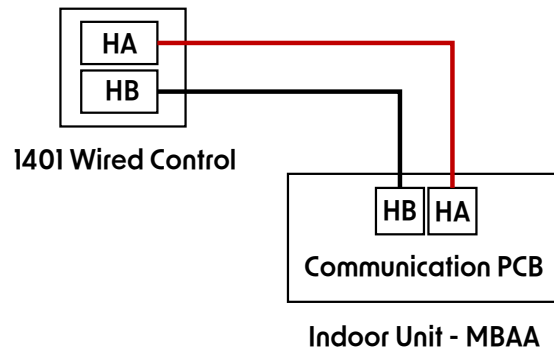


Scenario 1
1401 Wired
Control



SW1

Function
DIP switch

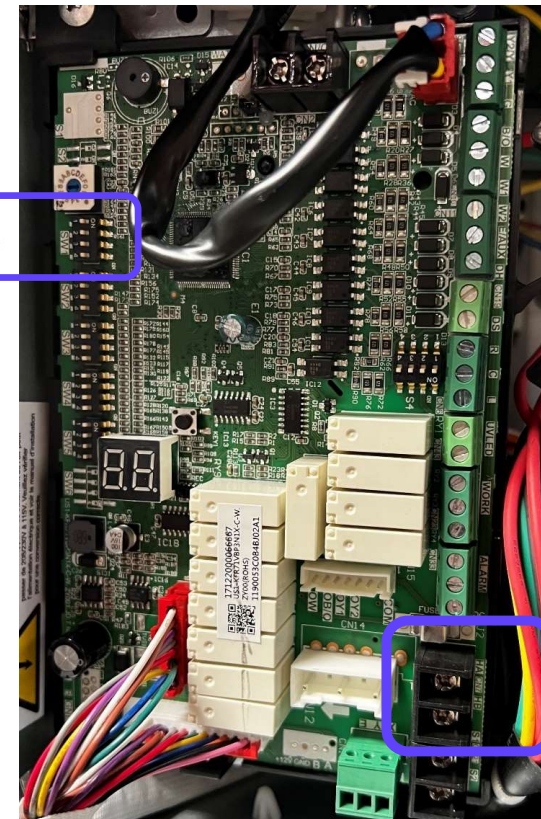

HA, HB
Connections

45MBAA Communication Board



Controls



45MBAA Control Scenario 2

Control Selection – SW1 DIP Switches

24-Volt Thermostat

Control Wire IDU to stat: Minimum 5-wire, up to 8-wire may be needed,
18 gauge solid or stranded.

Set SW1-1 to ON

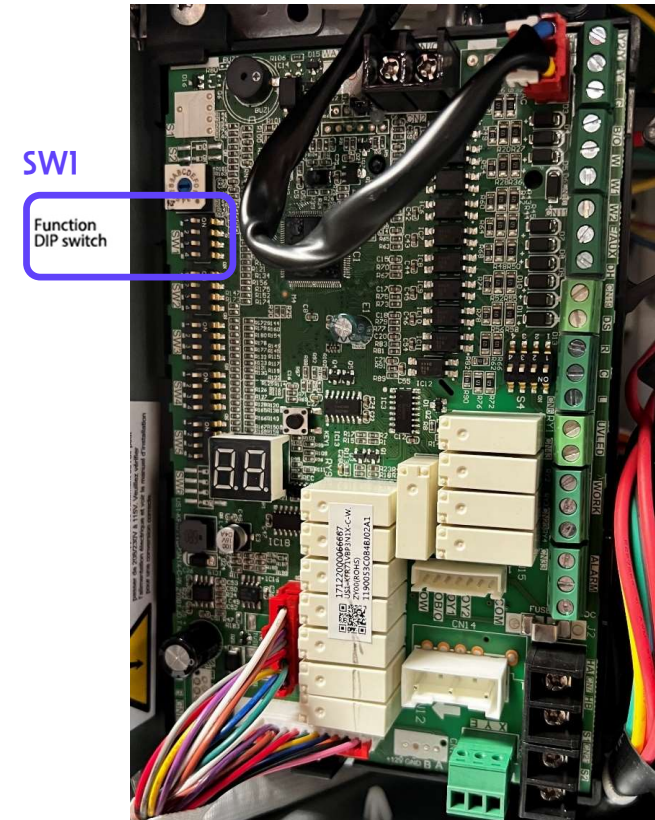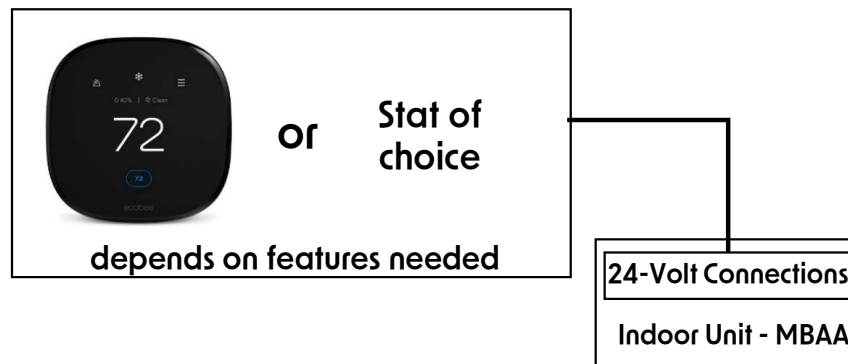

45MBAA Communication Board

Controls

Heat Pump Wiring Diagram

45MBAA Control Scenario 2 (cont.)



Control Scenario 2 – 24-Volt Staging Options

Control Wire IDU to stat: Minimum 5-wire, up to 8-wire may be needed, 18 gauge solid or stranded.
Set SW1-1 to ON

Indoor Unit Terminal Info

CONNECTOR	PURPOSE
R	24V Power Connector
C	Common
G	Fan Control
Y1	Low Demand
Y/Y2	High Demand
B	Heating Reverse Valve
W	Conventional Heat Control
W1	Stage 1 Electric Housing
W2	Stage 2 Electric Housing
E/AUX	Emergency Heating
DH	Dehumidification
DS	Reserved Signal
L	System Fault

Advanced Wiring

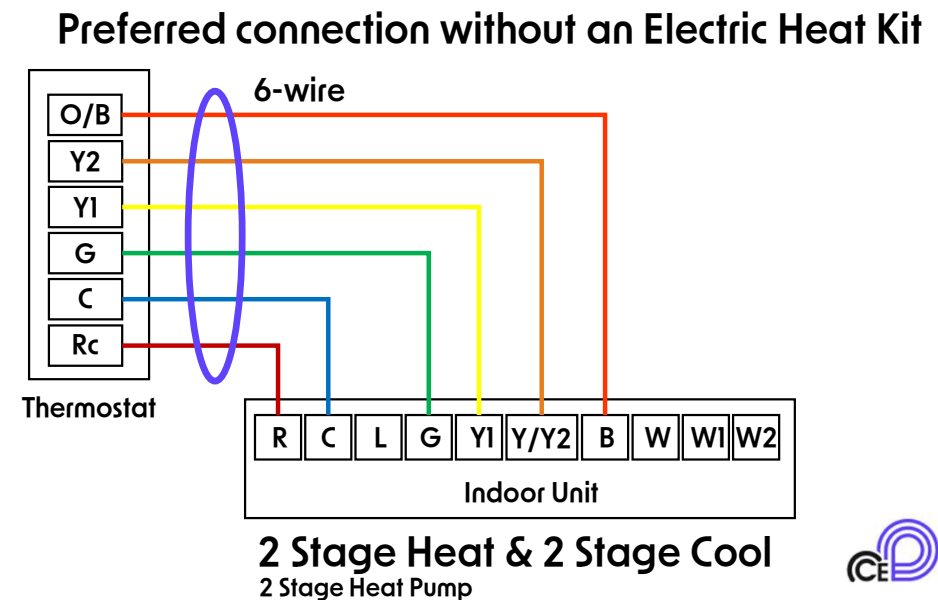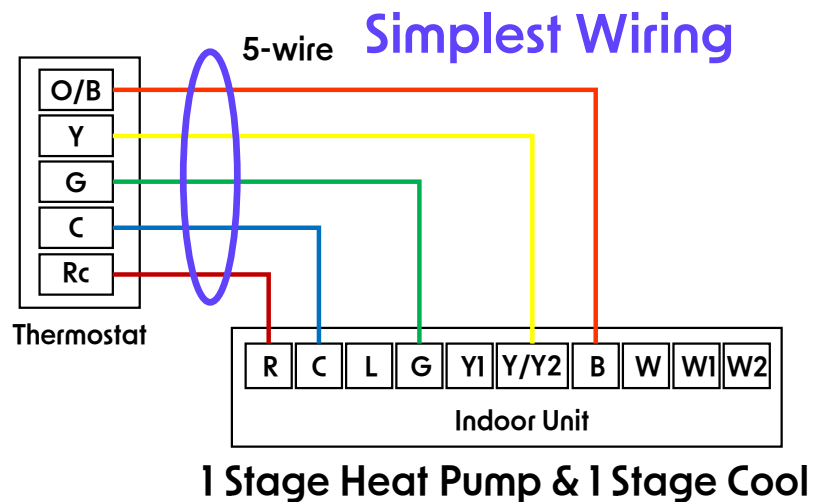

Controls

Heat Pump Wiring Diagram



45MBAA Control Scenario 2 (cont.)

Control Scenario 2 – 24-Volt Staging Options (cont.)

Control Wire IDU to stat: Minimum 5-wire, up to 8-wire may be needed, 18 gauge solid or stranded.
Set SW1-1 to ON

Indoor Unit Terminal Info

CONNECTOR	PURPOSE
R	24V Power Connector
C	Common
G	Fan Control
Y1	Low Demand
Y/Y2	High Demand
B	Heating Reverse Valve
W	Conventional Heat Control
W1	Stage 1 Electric Housing
W2	Stage 2 Electric Housing
E/AUX	Emergency Heating
DH	Dehumidification
DS	Reserved Signal
L	System Fault

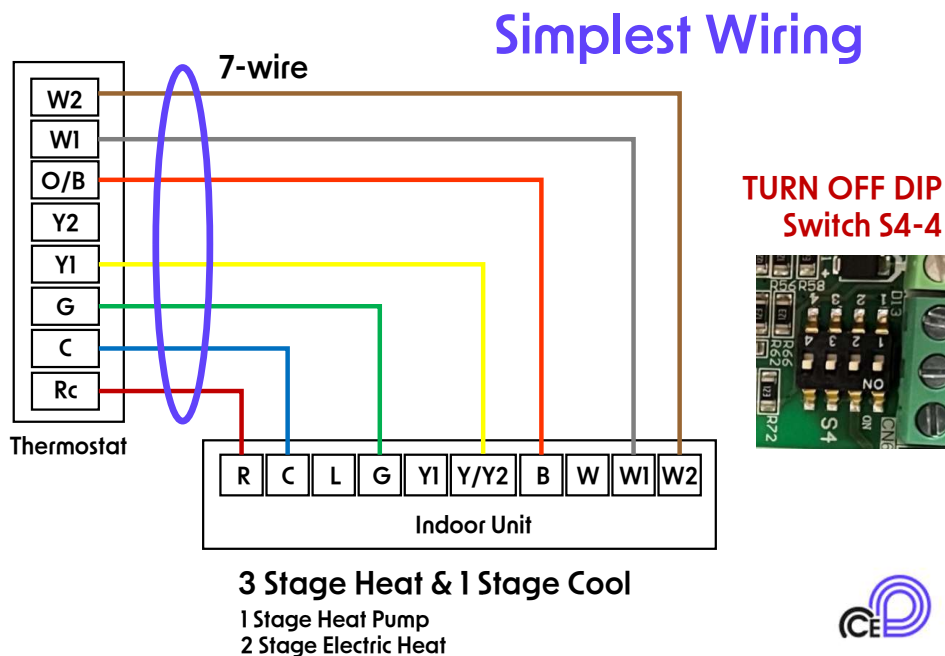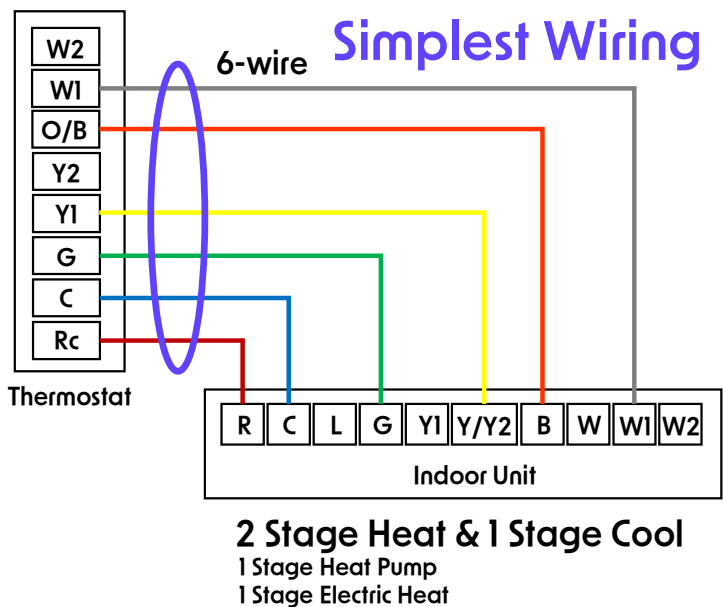

Controls

Heat Pump Wiring Diagram

45MBAA Control Scenario 2 (cont.)



Control Scenario 2 – 24-Volt Staging Options (cont.)

Control Wire IDU to stat: Minimum 5-wire, up to 8-wire may be needed, 18 gauge solid or stranded.
Set SW1-1 to ON

Indoor Unit Terminal Info

CONNECTOR	PURPOSE
R	24V Power Connector
C	Common
G	Fan Control
Y1	Low Demand
Y/Y2	High Demand
B	Heating Reverse Valve
W	Conventional Heat Control
W1	Stage 1 Electric Heating
W2	Stage 2 Electric Heating
E/AUX	Emergency Heating
DH	Dehumidification
DS	Reserved Signal
L	System Fault

Advanced Wiring

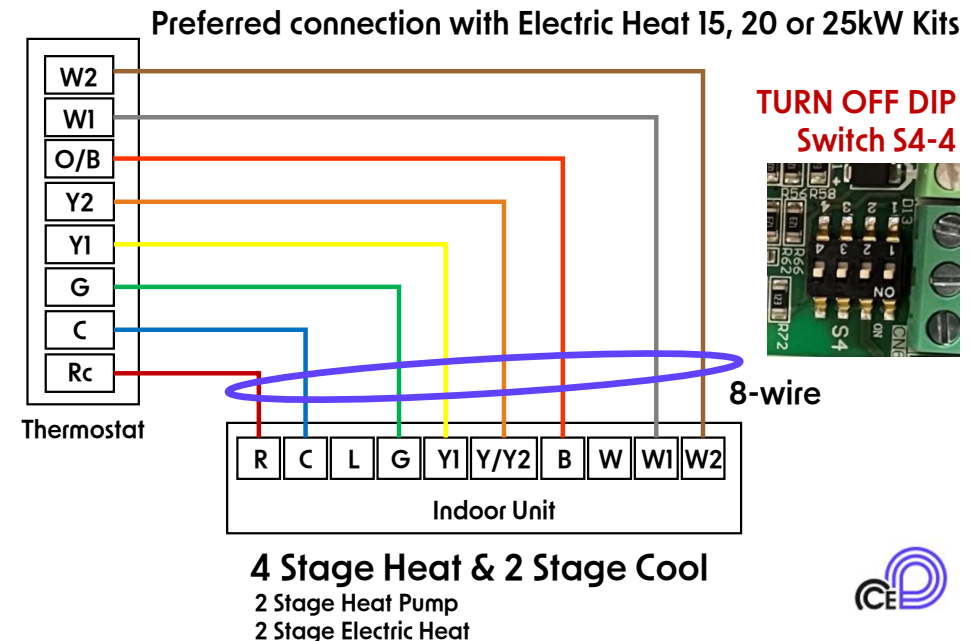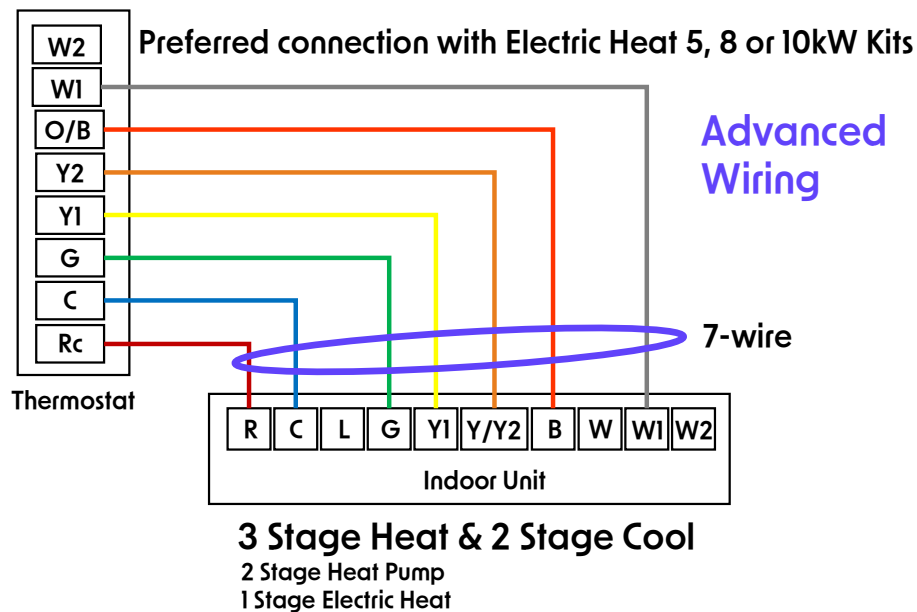

Controls

Conventional Wiring Diagram

45MBAA Control Scenario 2 (cont.)



Control Scenario 2 – 24-Volt Staging Options (cont.)

Control Wire IDU to stat: Minimum 5-wire, up to 8-wire may be needed, 18 gauge solid or stranded.
Set SW1-1 to ON

Indoor Unit Terminal Info

CONNECTOR	PURPOSE
R	24V Power Connector
C	Common
G	Fan Control
Y1	Low Demand
Y/Y2	High Demand
B	Heating Reverse Valve
W	Conventional Heat Control
W1	Stage 1 Electric Housing
W2	Stage 2 Electric Housing
E/AUX	Emergency Heating
DH	Dehumidification
DS	Reserved Signal
L	System Fault

Advanced Wiring

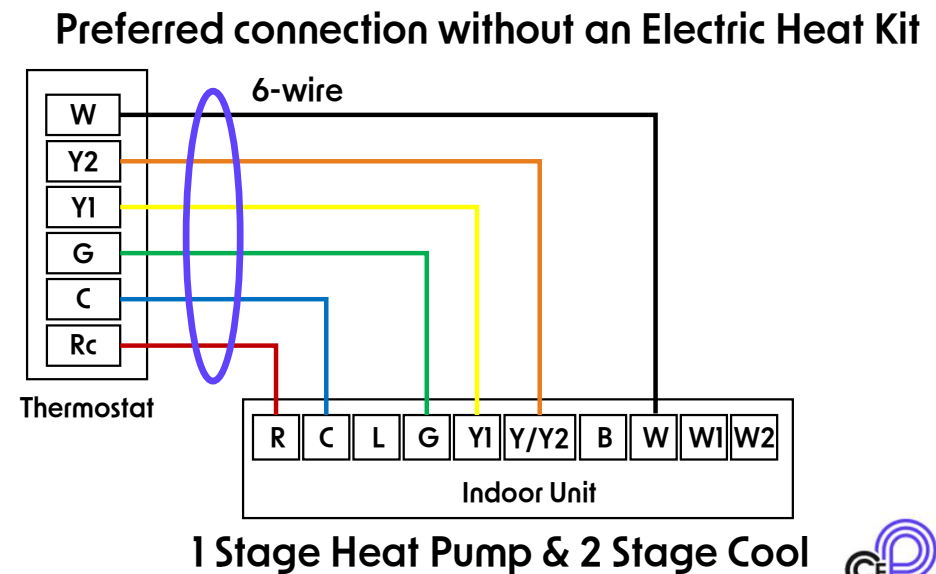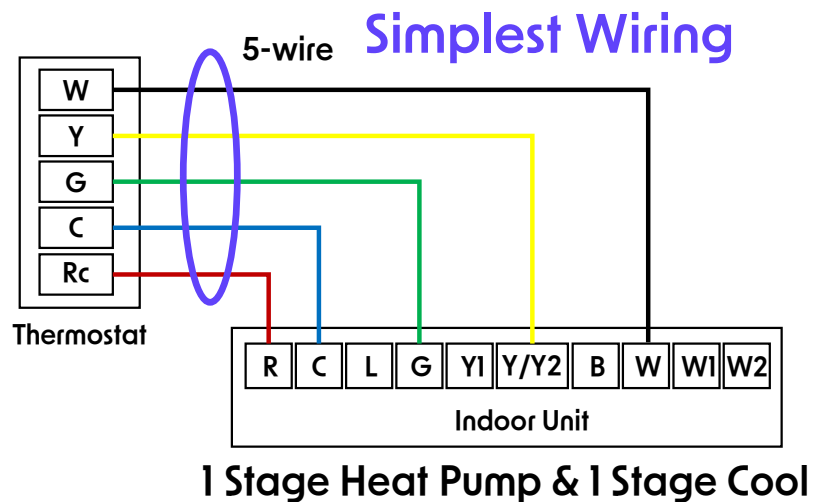

Controls

Conventional Wiring Diagram

45MBAA Control Scenario 2 (end)


Control Scenario 2 – 24-Volt Staging Options (end)

Control Wire IDU to stat: Minimum 5-wire, up to 8-wire may be needed, 18 gauge solid or stranded.
Set SW1-1 to ON

Indoor Unit Terminal Info

CONNECTOR	PURPOSE
R	24V Power Connector
C	Common
G	Fan Control
Y1	Low Demand
Y/Y2	High Demand
B	Heating Reverse Valve
W	Conventional Heat Control
W1	Stage 1 Electric Heating
W2	Stage 2 Electric Heating
E/AUX	Emergency Heating
DH	Dehumidification
DS	Reserved Signal
L	System Fault

Advanced Wiring

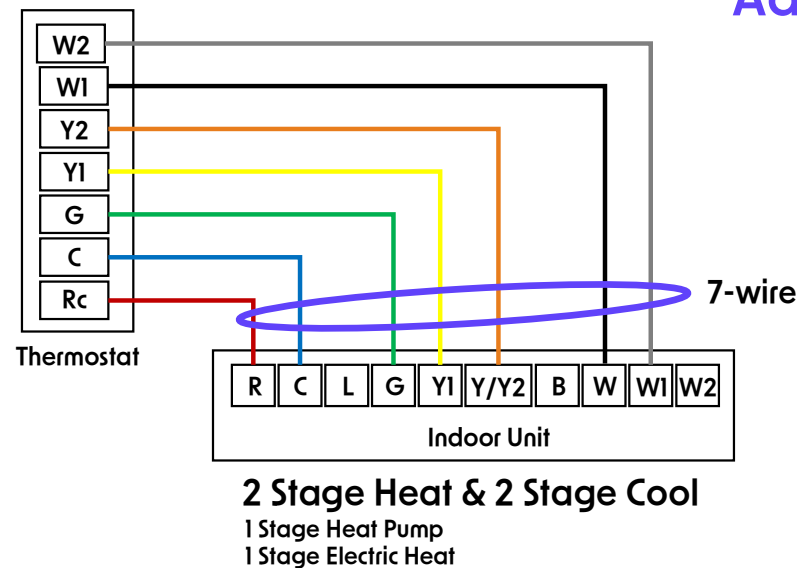

Controls

45MBAA Set Up Options

Anti-blow, Cooling Only Settings – SW1 DIP Switches
Scenarios – 1, 2

SW1-2: Anti-cold Blow Protection Option
Default value is OFF – Anti-Cold is active.

SW1-3: Single cooling / heating and cooling options
Default is OFF for Heating and Cooling, ON for Cooling Only System.

Scenario 1
1401 Wired
Control




Scenario 2
24-Volt
Control



SW1

Function
DIP switch

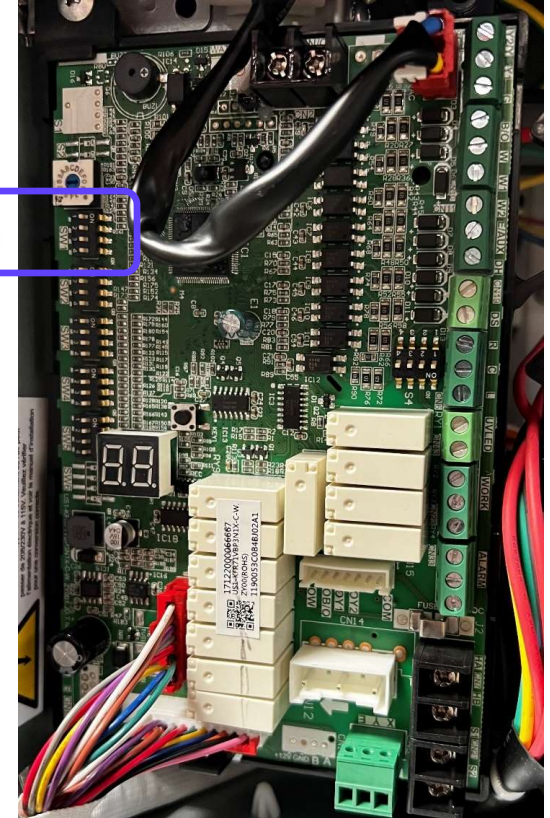

45MBAA Communication Board

Controls

45MBAA Set Up Options (cont.)

Electric Heat & Staging Settings – SW2 DIP Switches

Scenario – 1

SW2-1: Control Scenario 1

Temperature differential to activate first stage auxiliary heat.

Default is OFF 4°F, ON for 2°F

SW2-2: Electric heat on delay.

Default is OFF for NO delay, ON for YES

SW2-3: Electric auxiliary heating delay to start time (works with SW2-2)

Default is OFF for 15 min, ON for 30 min

SW2-1: Control Scenario 2

Compressor Running Compensation (Demand working with heat pump+ Electric heat) Default is OFF for Faster Compressor, ON for Slower Compressor

Scenario – 2

SW2-4: Compressor/Auxiliary heat outdoor ambient lockout.

Default OFF – Compressor allowed to operate to low limit set by S3

ON – Electric heating allowed to operate to high limit set by S3

See S3 switch info for more details.

Scenario 1
1401 Wired
Control




Scenario 2
24-Volt
Control



SW2

Function
DIP switch

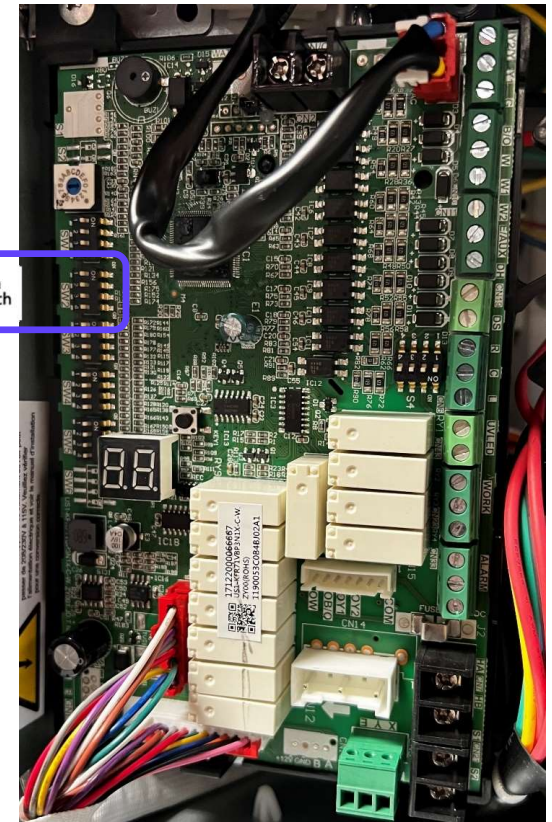

45MBAA Communication Board



Controls

45MBAA Set Up Options (cont.)

S3	S3 (°F)	S3	S3 (°F)	S3	S3 (°F)
0	OFF	5	-8	A	25
1	-22	6	-4	B	32
2	-18	7	3	C	36
3	-15	8	10	D	39
4	-11	9	18	E	43
				F	46

S3 Rotary Switch & DIP SW2-4 – Ambient temperature controlled by electric heating or compressor.

Scenario – 1

SW2-4 ON – Compressor/Auxiliary heat outdoor ambient lockout

The operation of heat pump is limited by the outdoor temperature, and the operation of auxiliary heat is not limited.

The system makes judgments according to the following rules:

- 1) The compressor can be operated when the outdoor temperature is \geq S3 DIP switch temperature +2 °C.
- 2) The compressor cannot be operated when the outdoor temperature is lower than the S3 DIP switch temperature.

Scenario – 2

SW2-4 OFF – Compressor

The operation of heat pump is limited by the outdoor temperature, and the operation of auxiliary heat is not limited.


The system makes judgments based on the following rules:

- 1) The compressor cannot be operated when the outdoor temperature is lower than the S3 DIP switch.
- 2) The compressor can be operated when the outdoor temperature is \geq S3 DIP switch temperature +2 °C.

Scenario 1
1401 Wired
Control



Scenario 2
24-Volt
Control

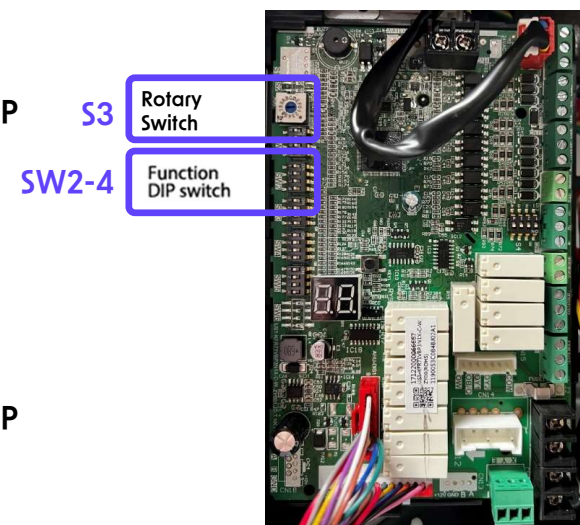

45MBAA Communication Board



Controls

45MBAA Set Up Options (cont.)

Runtime, Temp Differential Settings – SW3 DIP Switches

Scenario – 1

SW3-3: Temperature differential to activate second stage auxiliary heating
Default is OFF for 6°F, ON for 4°F

Scenario – 2

SW3-1: Continuous runtime

Default is OFF for 90 min, ON for 30 min

SW3-2: Cooling and heating Y2 temperature differential adjustment

Default is OFF for 4°F, ON for 2°F

SW3-3: Compressor Running (demand working with heat pump+ Electric heat)

Default is OFF for Faster Compressor, ON for Compressor slower speed

SW3-4: 3 Fan speed of cooling mode when 24V Thermostat is applied for.

Default is OFF for High, ON for Turbo

Scenario 1
1401 Wired
Control




Scenario 2
24-Volt
Control



SW3

Function
DIP switch

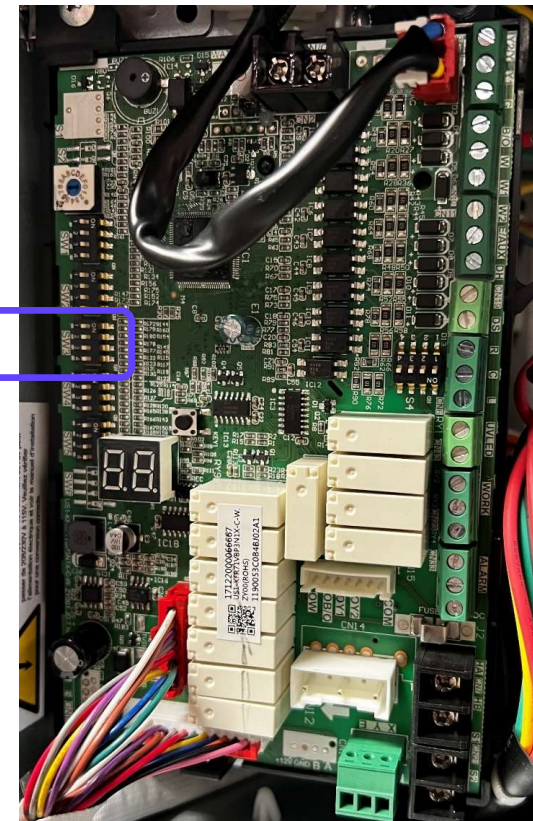

45MBAA Communication Board



Controls

45MBAA Set Up Options – External Static Pressure Settings

CAPACITY	EXTERNAL STATIC PRESSURE RANGE	FAN SPEED	ELECTRIC AUXILIARY HEAT MODULE	24V THERMOSTAT		WIRED CONTROLLER		AIRFLOW VOLUME (CFM)
				DIP SWITCH	24V TERMINAL ENGAGED	DIP SWITCH	MODE	
18K (1.5 Ton)	0 - 0.80 in. wc.	Cooling Turbo	—	SW3-4=ON	Y2/Y	—	Cool	618
		Cooling High	—	SW3-4=OFF	Y2/Y	—	Cool	576
		Cooling Medium	—	—	Y1	—	Cool	529
		Cooling Low	—	—	—	—	Cool	488
		Heat Pump Turbo	—	—	—	—	Heat	565
		Heat Pump High	—	—	B+Y2/Y, W	—	Heat	541
		Heat Pump Medium	—	—	B+Y1	—	Heat	435
		Heat Pump Low	—	—	—	—	Heat	400
		Electric auxiliary heat module 0(Default)	10kW	SW4-1=OFF SW4-2=OFF SW4-3=OFF	W1, W2, AUX	SW4-1=OFF SW4-2=OFF SW4-3=OFF	Heat + AUX, AUX	653
		Electric auxiliary heat module 1	10kW, 8kW	SW4-1=OFF SW4-2=OFF SW4-3=ON	W1, W2, AUX	SW4-1=OFF SW4-2=OFF SW4-3=ON	Heat + AUX, AUX	624
		Electric auxiliary heat module 2	8kW	SW4-1=OFF SW4-2=ON SW4-3=OFF	W1, W2, AUX	SW4-1=OFF SW4-2=ON SW4-3=OFF	Heat + AUX, AUX	594
		Electric auxiliary heat module 3	5kW, 3kW	SW4-1=OFF SW4-2=ON SW4-3=ON	W1, W2, AUX	SW4-1=OFF SW4-2=ON SW4-3=ON	Heat + AUX, AUX	565
24K (2 Ton)	0 - 0.80 in. wc.	Cooling Turbo	—	SW3-4=ON	Y2/Y	—	Cool	824
		Cooling High	—	SW3-4=OFF	Y2/Y	—	Cool	759
		Cooling Medium	—	—	Y1	—	Cool	694
		Cooling Low	—	—	—	—	Cool	629
		Heat Pump Turbo	—	—	—	—	Heat	788
		Heat Pump High	—	—	B+Y2/Y, W	—	Heat	753
		Heat Pump Medium	—	—	B+Y1	—	Heat	641
		Heat Pump Low	—	—	—	—	Heat	524
		Electric auxiliary heat module 0(Default)	15kW	SW4-1=OFF SW4-2=OFF SW4-3=OFF	W1, W2, AUX	SW4-1=OFF SW4-2=OFF SW4-3=OFF	Heat + AUX, AUX	871
		Electric auxiliary heat module 1	15kW, 10kW	SW4-1=OFF SW4-2=OFF SW4-3=ON	W1, W2, AUX	SW4-1=OFF SW4-2=OFF SW4-3=ON	Heat + AUX, AUX	841
		Electric auxiliary heat module 2	10kW, 8kW	SW4-1=OFF SW4-2=ON SW4-3=OFF	W1, W2, AUX	SW4-1=OFF SW4-2=ON SW4-3=OFF	Heat + AUX, AUX	818
		Electric auxiliary heat module 3	5kW	SW4-1=OFF SW4-2=ON SW4-3=ON	W1, W2, AUX	SW4-1=OFF SW4-2=ON SW4-3=ON	Heat + AUX, AUX	788



**45MBAA
Communication Board**


Controls

45MBAA Set Up Options – External Static Pressure Settings (cont.)

CAPACITY	EXTERNAL STATIC PRESSURE RANGE	FAN SPEED	ELECTRIC AUXILIARY HEAT MODULE	24V THERMOSTAT		WIRED CONTROLLER		AIRFLOW VOLUME (CFM)
				DIP SWITCH	24V TERMINAL ENGAGED	DIP SWITCH	MODE	
30K(2.5 Ton)	0 - 0.80 in.wc.	Cooling Turbo	—	SW3-4=ON	Y2/Y	—	Cool	988
		Cooling High	—	SW3-4=OFF	Y2/Y	—	Cool	894
		Cooling Medium	—	—	Y1	—	Cool	806
		Cooling Low	—	—	—	—	Cool	712
		Heat Pump Turbo	—	—	—	—	Heat	918
		Heat Pump High	—	—	B+Y2/Y, W	—	Heat	876
		Heat Pump Medium	—	—	B+Y1	—	Heat	665
		Heat Pump Low	—	—	—	—	Heat	453
		Electric auxiliary heat module 0(Default)	15kW	SW4-1=OFF SW4-2=OFF SW4-3=OFF	W1, W2, AUX	SW4-1=OFF SW4-2=OFF SW4-3=OFF	Heat + AUX, AUX	1088
		Electric auxiliary heat module 1	15kW, 10kW	SW4-1=OFF SW4-2=OFF SW4-3=ON	W1, W2, AUX	SW4-1=OFF SW4-2=OFF SW4-3=ON	Heat + AUX, AUX	1029
		Electric auxiliary heat module 2	10kW, 8kW	SW4-1=OFF SW4-2=ON SW4-3=OFF	W1, W2, AUX	SW4-1=OFF SW4-2=ON SW4-3=OFF	Heat + AUX, AUX	976
		Electric auxiliary heat module 3	5kW	SW4-1=OFF SW4-2=ON SW4-3=ON	W1, W2, AUX	SW4-1=OFF SW4-2=ON SW4-3=ON	Heat + AUX, AUX	918

SW4

Air Flow Adjustment

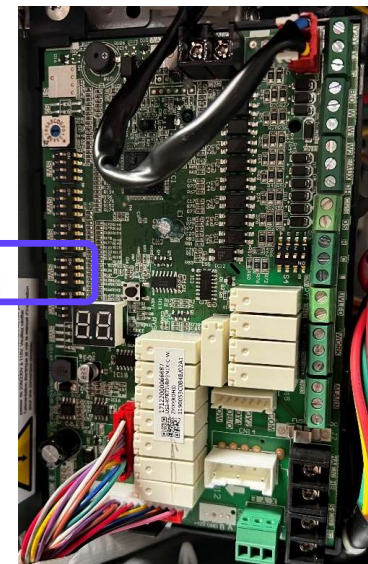

**45MBAA
Communication Board**

Controls

45MBAA Set Up Options – External Static Pressure Settings (cont.)

CAPACITY	EXTERNAL STATIC PRESSURE RANGE	FAN SPEED	ELECTRIC AUXILIARY HEAT MODULE	24V THERMOSTAT		WIRED CONTROLLER		AIRFLOW VOLUME (CFM)
				DIP SWITCH	24V TERMINAL ENGAGED	DIP SWITCH	MODE	
36K (3 Ton)	0 - 0.80 in.wc.	Cooling Turbo	—	SW3-4=ON	Y2/Y	—	Cool	1188
		Cooling High	—	SW3-4=OFF	Y2/Y	—	Cool	1082
		Cooling Medium	—	—	Y1	—	Cool	971
		Cooling Low	—	—	—	—	Cool	865
		Heat Pump Turbo	—	—	—	—	Heat	1112
		Heat Pump High	—	—	B+Y2/Y, W	—	Heat	1059
		Heat Pump Medium	—	—	B+Y1	—	Heat	794
		Heat Pump Low	—	—	—	—	Heat	582
		Electric auxiliary heat module 0(Default)	20kW	SW4-1=OFF SW4-2=OFF SW4-3=OFF	W1, W2, AUX	SW4-1=OFF SW4-2=OFF SW4-3=OFF	Heat + AUX, AUX	1306
		Electric auxiliary heat module 1	15kW	SW4-1=OFF SW4-2=OFF SW4-3=ON	W1, W2, AUX	SW4-1=OFF SW4-2=OFF SW4-3=ON	Heat + AUX, AUX	1241
		Electric auxiliary heat module 2	10kW, 8kW	SW4-1=OFF SW4-2=ON SW4-3=OFF	W1, W2, AUX	SW4-1=OFF SW4-2=ON SW4-3=OFF	Heat + AUX, AUX	1176
		Electric auxiliary heat module 3	5kW, 8kW	SW4-1=OFF SW4-2=ON SW4-3=ON	W1, W2, AUX	SW4-1=OFF SW4-2=ON SW4-3=ON	Heat + AUX, AUX	1112
		Cooling Turbo	—	SW3-4=ON	Y2/Y	—	Cool	1600
		Cooling High	—	SW3-4=OFF	Y2/Y	—	Cool	1471
		Cooling Medium	—	—	Y1	—	Cool	1282
		Cooling Low	—	—	—	—	Cool	1094
		Heat Pump Turbo	—	—	—	—	Heat	1471
		Heat Pump High	—	—	B+Y2/Y, W	—	Heat	1324
		Heat Pump Medium	—	—	B+Y1	—	Heat	1141
		Heat Pump Low	—	—	—	—	Heat	976



**45MBAA
Communication Board**

Controls

45MBAA Set Up Options – External Static Pressure Settings (cont.)

CAPACITY	EXTERNAL STATIC PRESSURE RANGE	FAN SPEED	ELECTRIC AUXILIARY HEAT MODULE	24V THERMOSTAT		WIRED CONTROLLER		AIRFLOW VOLUME (CFM)
				DIP SWITCH	24V TERMINAL ENGAGED	DIP SWITCH	MODE	
48K (4 Ton)	0 - 0.80 in.wc.	Electric auxiliary heat module 0(Default)	20kW	SW4-1=OFF SW4-2=OFF SW4-3=OFF	W1, W2, AUX	SW4-1=OFF SW4-2=OFF SW4-3=OFF	Heat + AUX, AUX	1741
		Electric auxiliary heat module 1	15kW	SW4-1=OFF SW4-2=OFF SW4-3=ON	W1, W2, AUX	SW4-1=OFF SW4-2=OFF SW4-3=ON	Heat + AUX, AUX	1653
		Electric auxiliary heat module 2	10kW, 8kW	SW4-1=OFF SW4-2=ON SW4-3=OFF	W1, W2, AUX	SW4-1=OFF SW4-2=ON SW4-3=OFF	Heat + AUX, AUX	1559
		Electric auxiliary heat module 3	8kW	SW4-1=OFF SW4-2=ON SW4-3=ON	W1, W2, AUX	SW4-1=OFF SW4-2=ON SW4-3=ON	Heat + AUX, AUX	1471
		Cooling Turbo	—	SW3-4=ON	Y2/Y	—	Cool	1806
		Cooling High	—	SW3-4=OFF	Y2/Y	—	Cool	1582
		Cooling Medium	—	—	Y1	—	Cool	1359
		Cooling Low	—	—	—	—	Cool	1135
		Heat Pump Turbo	—	—	—	—	Heat	1659
		Heat Pump High	—	—	B+Y2/Y, W	—	Heat	1582
		Heat Pump Medium	—	—	B+Y1	—	Heat	1247
		Heat Pump Low	—	—	—	—	Heat	976
60K (5 Ton)	0 - 0.80 in.wc.	Cooling Turbo	—	SW3-4=ON	Y2/Y	—	Cool	1806
		Cooling High	—	SW3-4=OFF	Y2/Y	—	Cool	1582
		Cooling Medium	—	—	Y1	—	Cool	1359
		Cooling Low	—	—	—	—	Cool	1135
		Heat Pump Turbo	—	—	—	—	Heat	1659
		Heat Pump High	—	—	B+Y2/Y, W	—	Heat	1582
		Heat Pump Medium	—	—	Y1	—	Heat	1247
		Heat Pump Low	—	—	—	—	Heat	976
		Electric auxiliary heat module 0(Default)	25kW	SW4-1=OFF SW4-2=OFF SW4-3=OFF	W1, W2, AUX	SW4-1=OFF SW4-2=OFF SW4-3=OFF	Heat + AUX, AUX	2171
		Electric auxiliary heat module 1	15kW, 20kW	SW4-1=OFF SW4-2=OFF SW4-3=ON	W1, W2, AUX	SW4-1=OFF SW4-2=OFF SW4-3=ON	Heat + AUX, AUX	2029
		Electric auxiliary heat module 2	10kW, 15kW	SW4-1=OFF SW4-2=ON SW4-3=OFF	W1, W2, AUX	SW4-1=OFF SW4-2=ON SW4-3=OFF	Heat + AUX, AUX	1894
		Electric auxiliary heat module 3	10kW	SW4-1=OFF SW4-2=ON SW4-3=ON	W1, W2, AUX	SW4-1=OFF SW4-2=ON SW4-3=ON	Heat + AUX, AUX	1753

NOTE: The constant airflow volume motor is applied. So the airflow volume is constant at all ESP within stated range.



**45MBAA
Communication Board**

Controls

Scenario 1
1401 Wired
Control



Scenario 2
24-Volt
Control




45MBAA Set Up Options (cont.)

Scenario - 1

S1 - Net Address Setting

- If one control per indoor unit (IDU), no change needed
- If two or more IDU per control, each S1 must have different value, up to 16 max

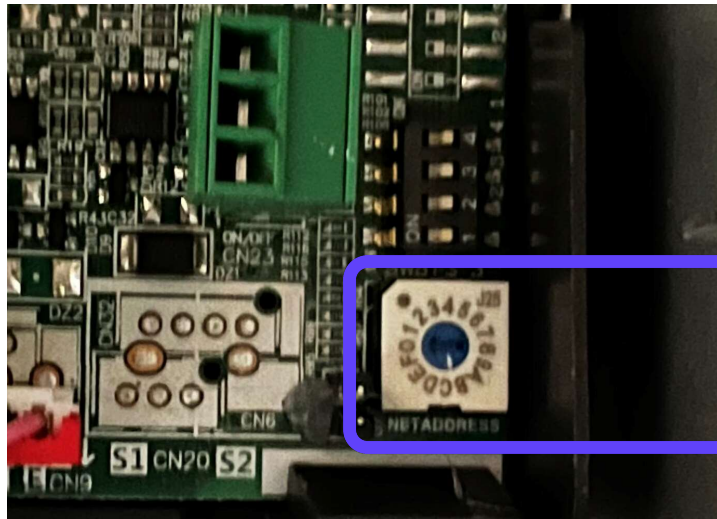

Rotary
Switch

S1



Controls

45MBAA Set Up Options (cont.)

S4 DIP Switch Function, both defaulted to ON
Scenario - 2

(only used with 24-Volt Control Option)



- S4-1 - No function currently, Do Not Use
- S4-2 - ON Dehumidification Not Available
- S4-2 - OFF Dehumidification Available
- See Install Manual for more details
- S4-3 - No function currently, Do Not Use
- S4-4 - ON = W1 & W2 close on W1 call
- S4-4 - OFF = Independent W1, W2 operation

We recommend Cooling mode over Dehumidification mode for most applications. If you have specific humidity needs, please consult with your sales representative.

Scenario 1
1401 Wired
Control



Scenario 2
24-Volt
Control

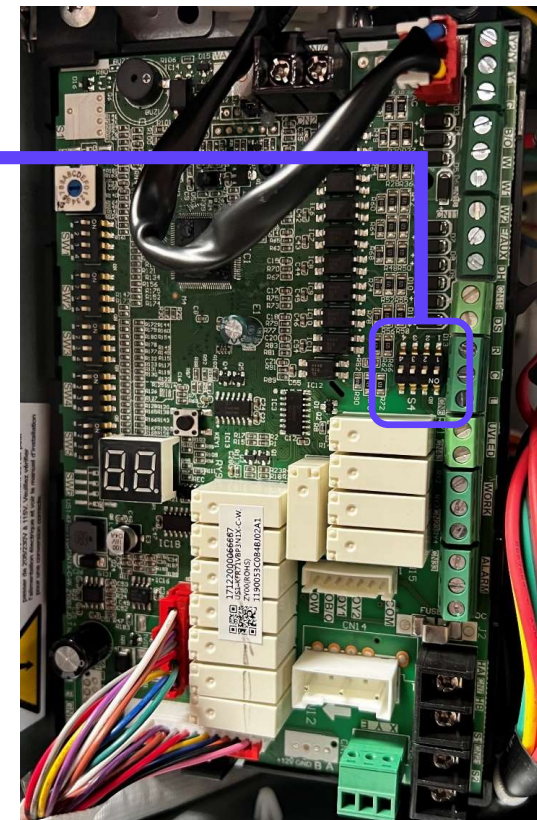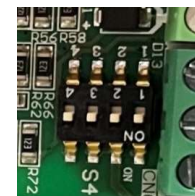

45MBAA Communication Board



Controls

45MBAA Set Up Options (cont.)

Full DIP/Rotary Switch Explanations

Scenario 1 140I Wired Control

Scenario 2 24-Volt Control

SW1	Control type	Note
	Wired controller / 24V thermostat	Auto Discovery
	Wired controller	Scenario 1
	24V Thermostat	Scenario 2

Scenario 1
140I Wired
Control



Scenario 2
24-Volt
Control



No.	Dial Code	Control Scenario	Function	ON	OFF	Note
1	SW1-2	1,2	Anti-cold blow protection option	NO	[Default] YES	
2	SW1-3	1,2	Single cooling / heating and and cooling options	Cooling	[Default] Cooling & Heating	
3	SW2-1	2	Compressor Running (demand working with heat pump+ Electric heat)	Compressor slower speed	[Default] Faster Compressor	Only affects compressor and W1
4	SW2-1	1	Temperature differential to activate first stage auxiliary heat(the GAP of T1 and Ts).Wire controller demand with heat pump+Electric heat working together	2°F(1 °C)	[Default] 4°F(2°C)	
5	SW2-2	1	Electric heat on delay	YES	[Default]NO	
6	SW2-3	1	Electric auxiliary heating delay to start time	30 minutes	[Default] 15 minutes	Based on SW2-2 is ON
7	SW2-4	2	Compressor	The operation of heat pump is limited by the outdoor temperature, and the operation of auxiliary heat is not limited.The system makes judgments according to the following rules: 1) The compressor can be operated when the outdoor temperature is >S3 DIP switch temperature +2 °C. 2) The compressor cannot be operated when the outdoor temperature is lower than the S3 DIP switch temperature.	[Default]The operation of heat pump is limited by the outdoor temperature, and the operation of auxiliary heat is not limited. The system makes judgments based on the following rules: 1) The compressor cannot be operated when the outdoor temperature is lower than the S3 DIP switch. 2) The compressor can be operated when the outdoor temperature is >S3 DIP switch temperature +2 °C.	SW2-4 and S3 need to working together
8	SW2-4	1	Compressor/Auxiliary heat outdoor ambient lockout	The operation of heat pump is limited by the outdoor temperature, and the operation of auxiliary heat is not limited.The system makes judgments according to the following rules: 1) The compressor can be operated when the outdoor temperature is >S3 DIP switch temperature +2 °C. 2) The compressor cannot be operated when the outdoor temperature is lower than the S3 DIP switch temperature.	[Default]Only one heat pump or auxiliary heat can be operated .The system makes judgments according to the following rules: 1) When the outdoor temperature is lower than the S3 DIP switch temperature,the compressor is not allowed to operated , but auxiliary heat is allowed to operated ; 2) When the outdoor temperature is >S3 DIP switch temperature +2(°C), the compressor can be operated, but auxiliary heat cannot be operated.	
9	Rotary Switch S3	1,2	Set outdoor temperature Limitation (for auxiliary heating or compressor)	Table A		
10	SW3-1	2	Maximum continuous runtime allowed before system automatically stages up capacity to satisfy set point, This adds 1 to 5°F to the user set point in the calculated control point to increase capacity and satisfy user set point	30 minutes	[Default] 90 minutes	
11	SW3-2	2	Cooling and heating 1/2 temperature differential adjustment.	Compressor slower speed	[Default] Faster Compressor	Only affects compressor
12	SW3-3	2	Compressor Running (demand working with heat pump+ Electric heat)	Compressor slower speed	[Default] Faster Compressor	Only affects compressor and W2
13	SW3-3	1	Temperature differential to activate second stage auxiliary heating(the GAP of T1 and Ts)Wire controller demand with heat pump+Electric heat working together	4°F(2°C)	[Default] 6 °F(3°C)	



Controls

Scenario 1
1401 Wired
Control



Scenario 2
24-Volt
Control



45MBAA Set Up Options (end)

Full DIP/Rotary Switch Explanations

Scenario 1 1401 Wired Control

Scenario 2 24-Volt Control

SW1	Control type	Note
	Wired controller / 24V thermostat	Auto Discovery
	Wired controller	Scenario 1
	24V Thermostat	Scenario 2

No.	Dial Code	Control Scenario	Function	ON	OFF	Note
14	SW3-4	2	Fan speed of cooling mode when 24V Thermostat is applied for.	Turbo	High	
15	SW4-1 SW4-2 SW4-3	1,2	Electric heat nominal CFM adjustment	Available settings are 000/001/010/011. Each digit corresponds an individual switch position. For example [SW4-1 OFF, SW4-2 ON, SW4 -3 OFF] = 010		
16	SW4-4	1	Temperature differential to activate third stage auxiliary heating(the GAP of T1 and Ts)Wire controller demand with heat pump+ Electric heat working together	6°F(3°C)	[Default]8°F(4°C)	Only valid for product which has three stage auxiliary heating.
17	S4-4	2	Default: ON	[Default] For single stage supplemental heat, W1 and W2 are connected	For dual stage supplemental heat, W1 and W2 are controlled independently.	
18	S4-2	2	DH function selection	[Default] Dehumidification control not available	Dehumidification feature is enabled through thermostat	
19	SW5-3	1,2	L or Alarm relay selection	L output 24V or alarm relay close only when refrigerant sensor fault or R454B refrigerant leakage be detected	[default] L output 24V or alarm relay close when any fault be detected	
20	SW5-4	1,2	R output selection	R stop ouput 24V when refrigerant sensor fault or R454B refrigerant leakage be detected	[default] R keep ouput 24V even when refrigerant sensor fault or R454B refrigerant leakage be detected	